



 
 
QUICK START GUIDE

Digital Indoor / Outdoor Antenna

SAE-5500

PACKAGE CONTENTS

- Antenna x1
- U-shaped screw x1
- Quick Start Guide




- Pole mounting part x1



- Power Inserter x1

 - Butterfly screw x2

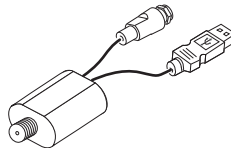

PLACEMENT TIPS FOR ANTENNAS

• Avoid interference

Keep the antenna away from appliances that generate strong electrical noise (e.g., air conditioners, microwaves, elevators, hair dryers).

• Install higher

Obstacles may reduce reception; a higher position usually gives better signal.

• Choose an open location

Indoor: place near a window for better reception.

Outdoor: avoid metal walls or structures.

• Check available channels

Visit www.antennaweb.org (for U.S. market only), or scan the QR code to check which channels are available in your area.

Q antennaweb



*You can also search for a "TV signal finder" app on your smartphone.

**SCAN
CHANNELS**

Perform a **"Channel Scan"** after installation.
Please **re-scan** your TV **each time** you move or adjust the antenna.

For any questions,
please contact
SHERRIVA Customer Support.
support@sherriva.com

Please scan the QR code to watch a video on how to use the product.



Video

 


User manual

INSTALLATION

Indoor Use – Stand



- Insert the U-shaped screw into the groove on the back panel.

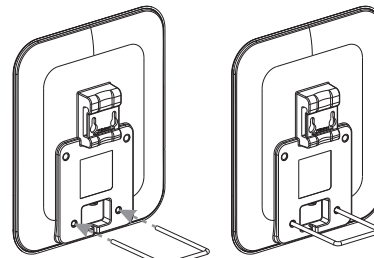

Outdoor Use – Pole Mounting

- (1) Insert the U-shaped screw into the groove on the back panel.
- (2) Hook the U-shaped screw on the pole.
- (3) Secure it with the bracket and butterfly screws.

  - Select a proper location for your antenna.
- Refer to "Placement Tips for Antennas" for optimal performance.
- You may adjust its orientation to achieve the best signal.
- **Warning:** To prevent electric shock, keep the antenna away from power lines and utility poles.

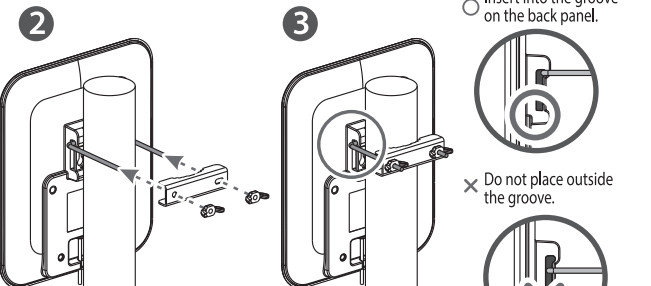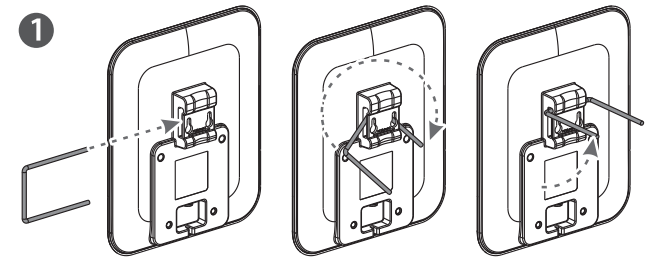


○ Insert into the groove on the back panel.

✗ Do not place outside the groove.

CONNECTION

Note: The Power Inserter needs to be installed and powered on for the antenna to function properly.

 1. Connect the built-in coaxial cable to the Power Inserter.
2. Connect the Power Inserter's coaxial cable to your TV or digital set-top box.
3. Connect the USB cable to the TV's USB port or to an external USB power adapter.

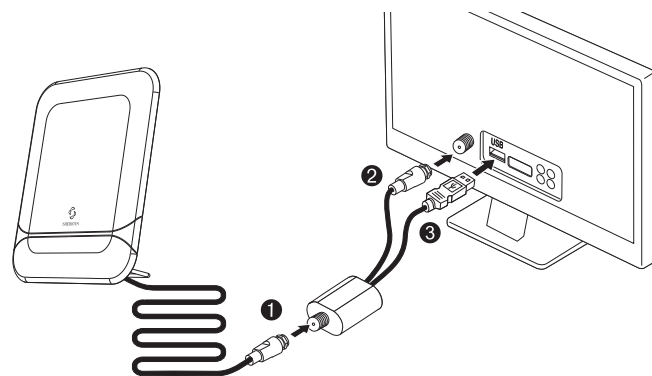


Indoor Use

SPECIFICATIONS

Range	55 Miles	
Frequency Range	VHF: 174~216 MHz	UHF: 470~608 MHz
Amplifier Gain (dB)	VHF: 24 ±3 dB	UHF: 22 ± 4 dB
Isolation	>6 dB (@730 MHz)	
Output Return Loss	≤ -6 dB	
Noise Figure	≤ 5 dB	
RF Output Impedance	For 75 Ohm TV System	
RF Cable	1.5C- 2V, Length 500cm, F Male	
Power Inserter	Frequency: 174~608 MHz Insertion Loss: < 2.5 dB Connector: F Female RF Cable: 1.5C-2V / 150 mm / F Male USB Cable: 1800 mm (USB Type-A) Input Voltage: DC 5V Output Voltage: DC 5V	
Dimensions	190x225x35.2mm	

※ Specifications are subject to change without prior notice.

 ※ The manufacturer reserves the right to make changes to the hardware, packaging, or documentation without prior written notice.

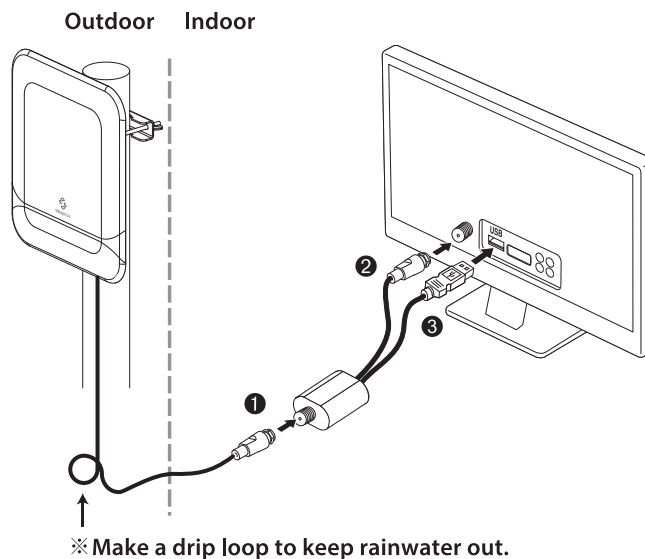

Outdoor Use

FREQUENTLY ASKED QUESTIONS

Q: If you cannot receive the expected digital channels, please check the following items:

a. Check the connections

Ensure that the coaxial cable (F-type Male) and USB power cable are securely connected.

b. Avoid TV panel interference

If the antenna is installed too close to your TV screen, try moving it farther away.

Some TV panels may generate interference and reduce reception quality.

c. Adjust the antenna direction and rescan the channels

Reposition the antenna on a wall or window, then rescan the TV channels to find the best reception angle.

Q: How can I check which channels are available in my area?

- a. To check available channels in your area, please visit:
www.antennaweb.org
 (for the U.S. market only).

- b. You can also search for a "TV signal finder" app on your smartphone.

 


Q antennaweb

SCANNING THE CHANNELS

After completing the installation, please run a **channel scan** on your TV to receive all available channels.

1. Turn on your TV and open the Settings menu.
2. Set the TV tuner mode to Antenna (sometimes shown as Air).
3. Run the Channel Scan (may also appear as Auto Scan, Auto Tuning, Auto Program, or Channel Search).
4. If only a few channels are found or the reception is weak, adjust the antenna and re-scan.
5. Re-scan whenever the antenna is moved or rotated.

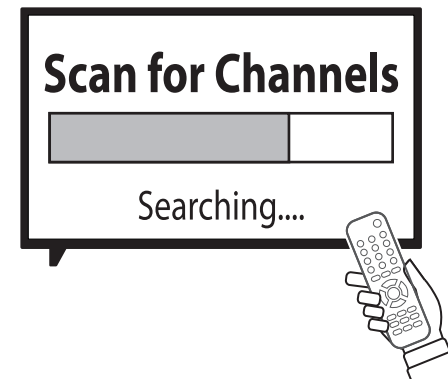

FCC COMPLIANCE STATEMENT

FCC Statement

1. FCC Caution - §15.21:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. FCC Statement - §15.105(b):

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.