

 
Wireless Video Transmission System for Camera User Manual




Product Specifications

Brand	SHERRIVA
Model	WHD-6100
Product	Wireless Video Transmission System for Camera
Latency	0.06s
Range	1000FT
Power Supply	DC / Type-C / Battery
Input Voltage	USB-C 5V/2A (DC 9-16V)
Features	One Transmitter to Multiple Receivers
Warranty	1 Year
Country of Origin	Made in China

Connection Diagram

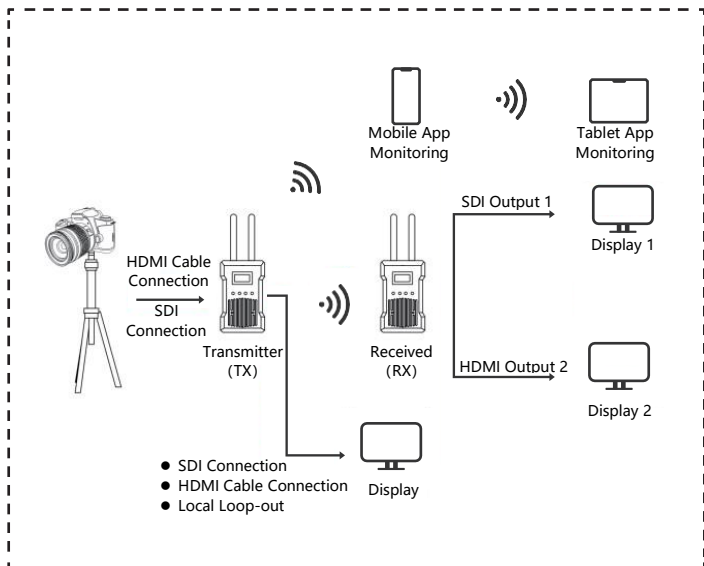

Interface Overview

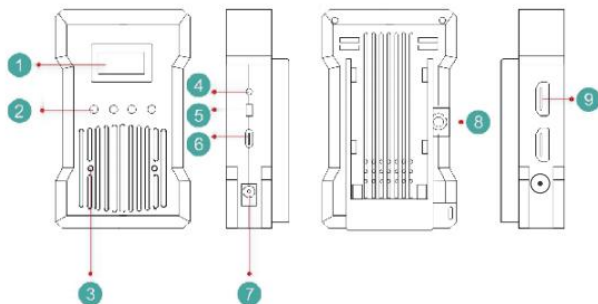

① Display Screen

② Function Button

③ Fixing Screw Hole

④ Power LED

⑤ On/Off Switch


⑥ USB-C

⑦ DC 9-16V Power Input


⑧ Battery Lock Button

⑨ Signal Input Port

Installation Diagram

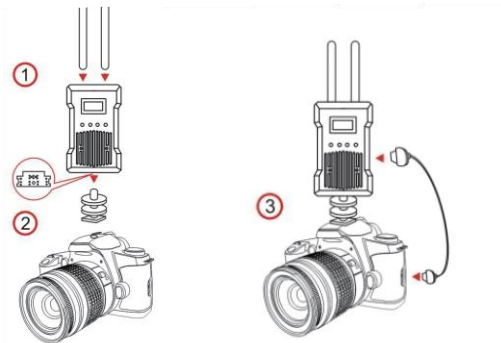

- ① Attach the antennas to the device
- ② Secure the base to the camera with a screw
- ③ Connect the HDMI cable

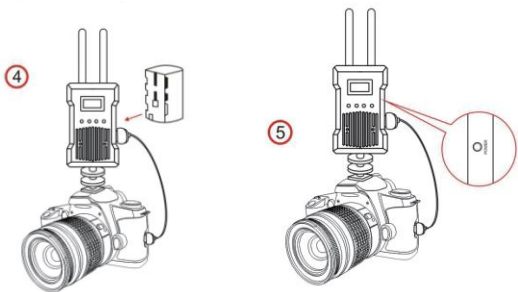

- ④ Insert the battery into the back of the device
- ⑤ Press the power button to turn the device on

Operation Guide

1. Device Pairing

Press and hold the **"Back button"**  on both the transmitter and receiver for 5 seconds, then release. The devices will automatically complete pairing.

2. Frequency Switching

Press the **"Left or Right button"**   on the transmitter to switch frequency channels.

- Press **Left** to decrease frequency
- Press **Right** to increase frequency

3. Advanced Menu

Press and hold the **"OK button"**  on either the transmitter or receiver for 5 seconds, then release to enter the advanced menu.

In this menu, you can check:

- Wi-Fi network name
- Firmware version
- Other system information

App Monitoring Instructions

1. Download the App

Scan the QR code with your mobile phone to open the download page, then tap to download and install the App.



Download on Android



Download on iOS

Tips:

- Android may ask to confirm installation—please tap "Install" or "Allow".
- On iOS App Store, it may appear in Chinese; the interface will match your system language after download.

2. Connect to Device Wi-Fi

- Go to your phone's Wi-Fi settings and find the Wi-Fi network starting with "JM01"
- Connect to the network and enter the default **password: 12345678**
- Once connected, open the App to start real-time monitoring.

⚠ Note:

This Wi-Fi network does not provide internet access.

If your phone prompts to switch networks due to no internet connection, please **choose to stay connected** to ensure stable monitoring.

FAQ

Q1: The video signal is unstable or occasionally drops—how can I improve it?

A: Try switching the frequency channel to reduce wireless interference. On the transmitter, press the **Left or Right** button to switch to a different frequency.

- Left = lower frequency
- Right = higher frequency
- Choose a channel with the least interference for your environment.

Q2: The display shows no image when connected to a 1080P monitor—what should I do?

A: Make sure the video source (camera, computer, etc.) is set to 1080P output. If the source device is outputting a higher resolution (like 4K), and your display only supports 1080P, it may not show image. Adjust the resolution on the source to 1080P for proper compatibility.



SHERRIVA

SHERRIVA CORPORATION

Get in touch!

Looking for something special? Have a question? Let us know, and we'll get back to you soon.

- Email: support@sherriva.com
- Phone: (312)819-6861

Join our Facebook group

